


## #207 MOUNTING GUIDE

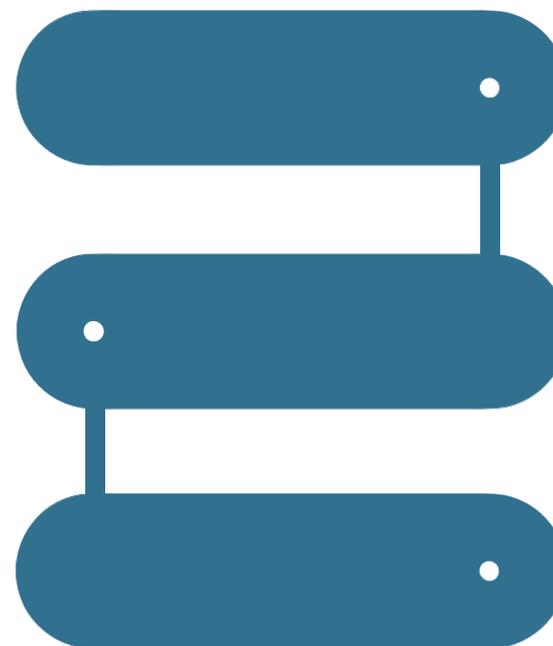

# PLATEAU PICNIC STREET

Developed by out-sider in collaboration with Holscher Design 2021.

<b>INDEX:</b>	<b>PAGE</b>
Item list .....	<b>02</b>
Assembling legs and table.....	<b>03</b>
Assembling laminate seats to the legs.....	<b>04</b>
Assembling seats to table frame.....	<b>04</b>
Fixation of Point Sun.....	<b>05</b>
Cleaning and maintenance .....	<b>06</b>

## ITEM LIST


### Street 1250/1800

- 3 pcs M8x90
- 3 pcs M8 nut
- 6 pcs M8 washer
- 12 pcs M8x16

#### Tools (not included)

- Allen key set
- Socket wrench set
- Screws and bolts for the mounting of the surface bracket

3x Seat 1800 or Seat 1250 #195

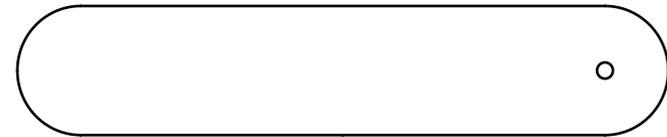


1x logo disc  
(195 9040)




2x disc  
(195 9041)



2x Short leg with flange  
(207 9012)

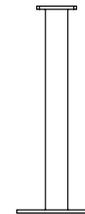


2x Street leg (207 9231)

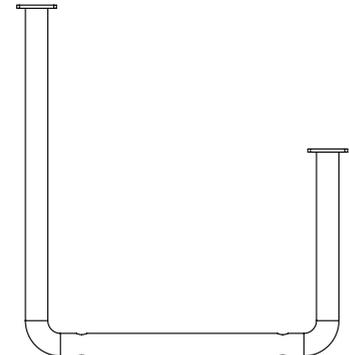

## ADD-ONS

*Add-ons, are not included with standard product*

1x Point Sun #326  
f. Seat

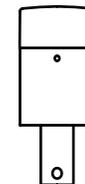


POINT SUN BASE 3  
(319 7003)

## ASSEMBLING LEGS AND TABLE

**A:** Place the table on a soft surface bottom up. Screw on the two legs (207 9231) with the included M8x16 countersunk screws, two for each leg.

**B:** Flip the table and insert the disc with a logo into the hole in the tabletop. Make sure the disc is flat and flush with the surface. Use the M8x90, washers, and M8 nut to fasten the disc to the frame.

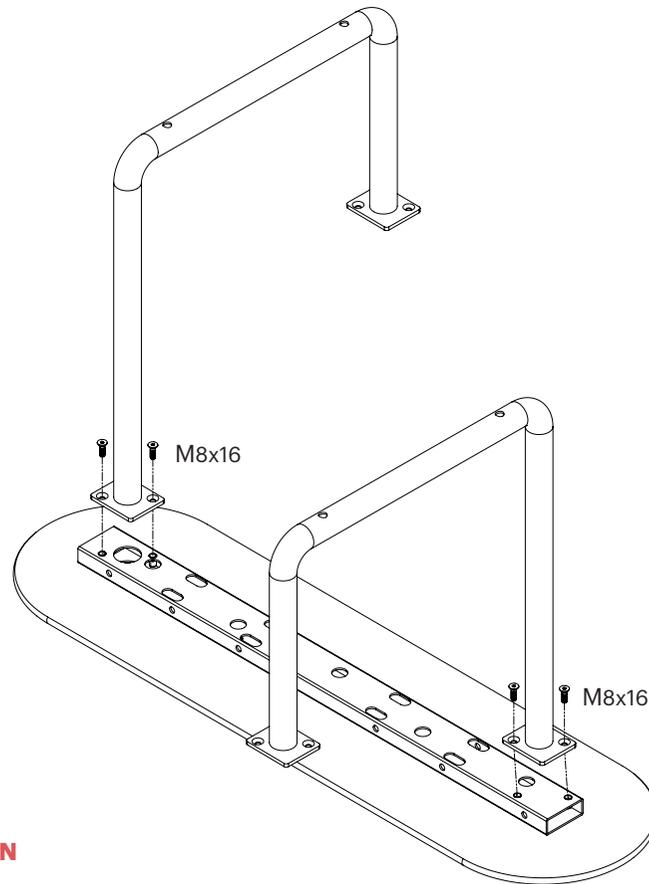


### ATTENTION

- Only place laminate on a safe, or soft surface to prevent damage to the laminate.


**A**

**B**

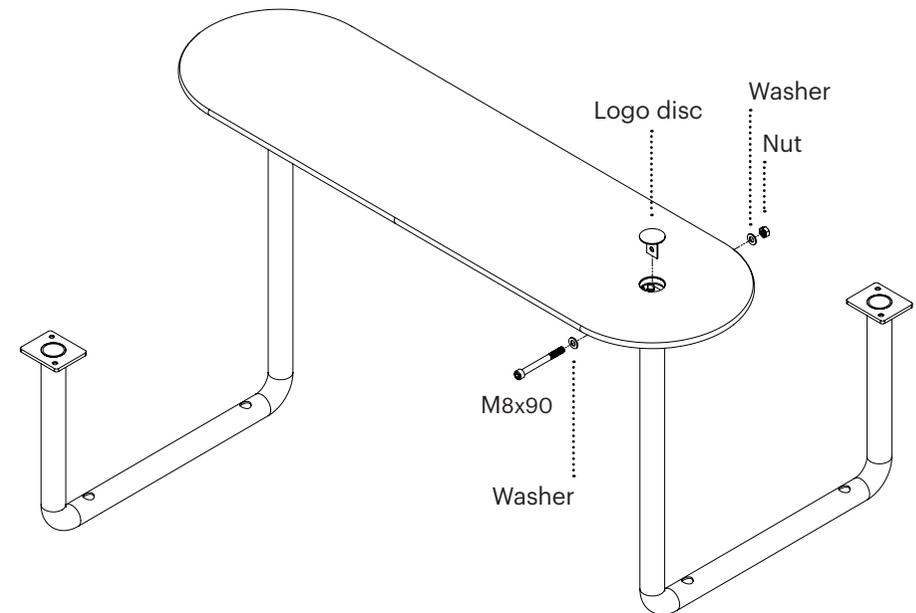

## ASSEMBLING LAMINATE SEATS TO LEGS

Place the seats on a soft surface bottom up. Screw the small leg (207 9012) on the opposite end of the first leg with the included M8x16 countersunk screws, two for each leg. Repeat the procedure with the other seat and leg.

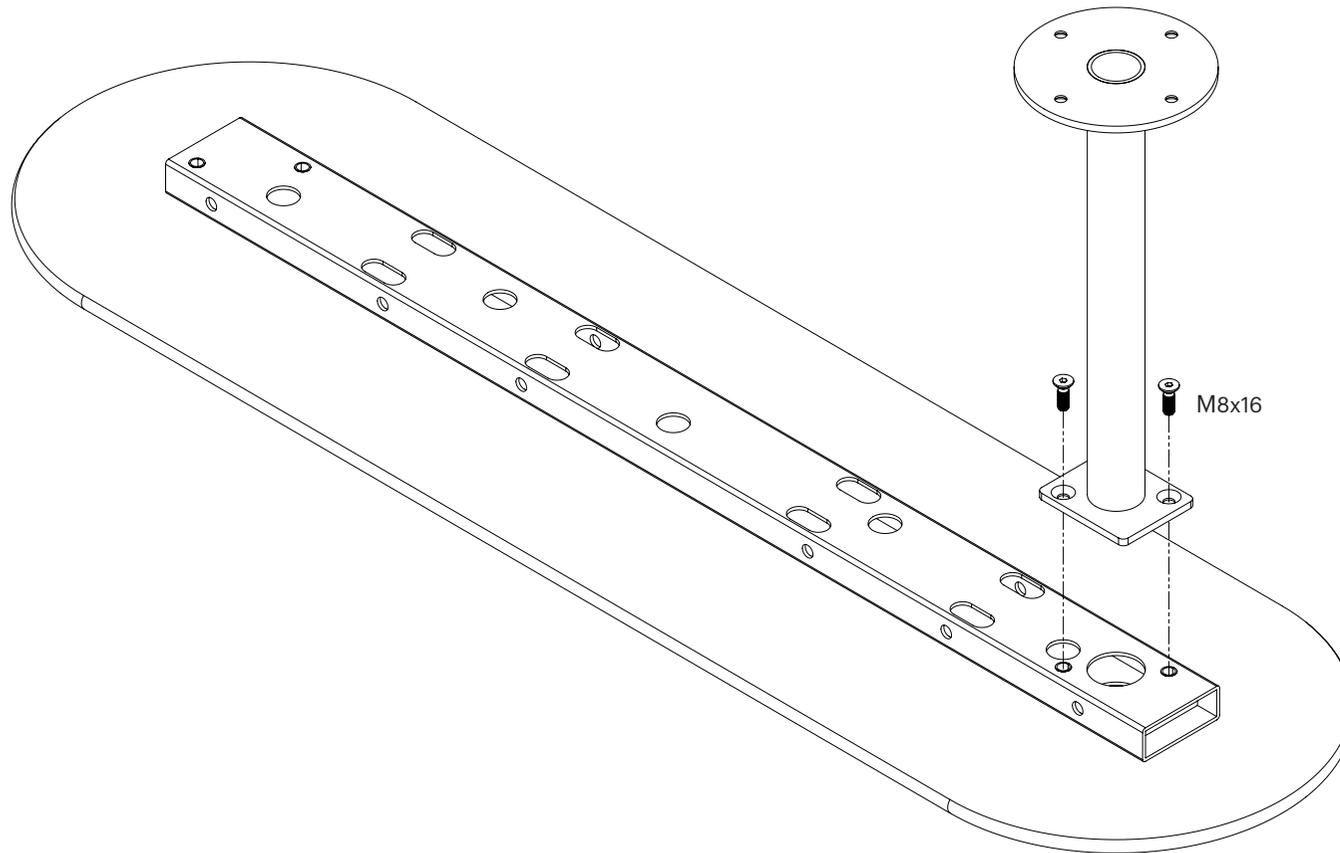



### ATTENTION

- Only place laminate on a safe, or soft surface to prevent damage to the laminate.

- Repeat procedure with the next 1800/1250 seat for 207 Street.


# ASSEMBLING SEATS TO TABLE FRAME

Place the two seats on the legs attached to the table and screw them on with the included M8x16 countersunk screws, two for each leg. Then insert the two discs without logos into the holes in the seats. Make sure the disc is flat and flush with the surface. Use the M8x100, washers, and M8 nuts to fasten the discs to the frame.

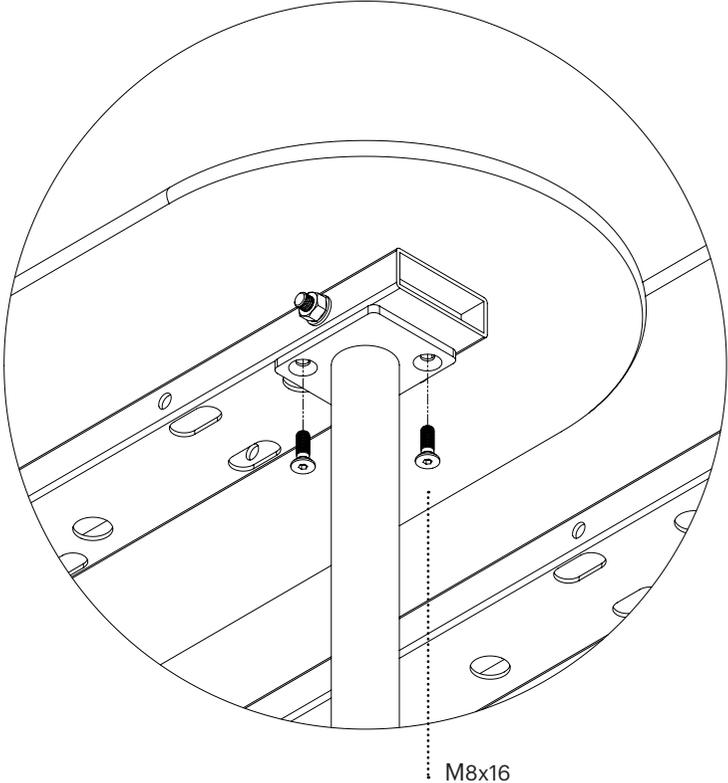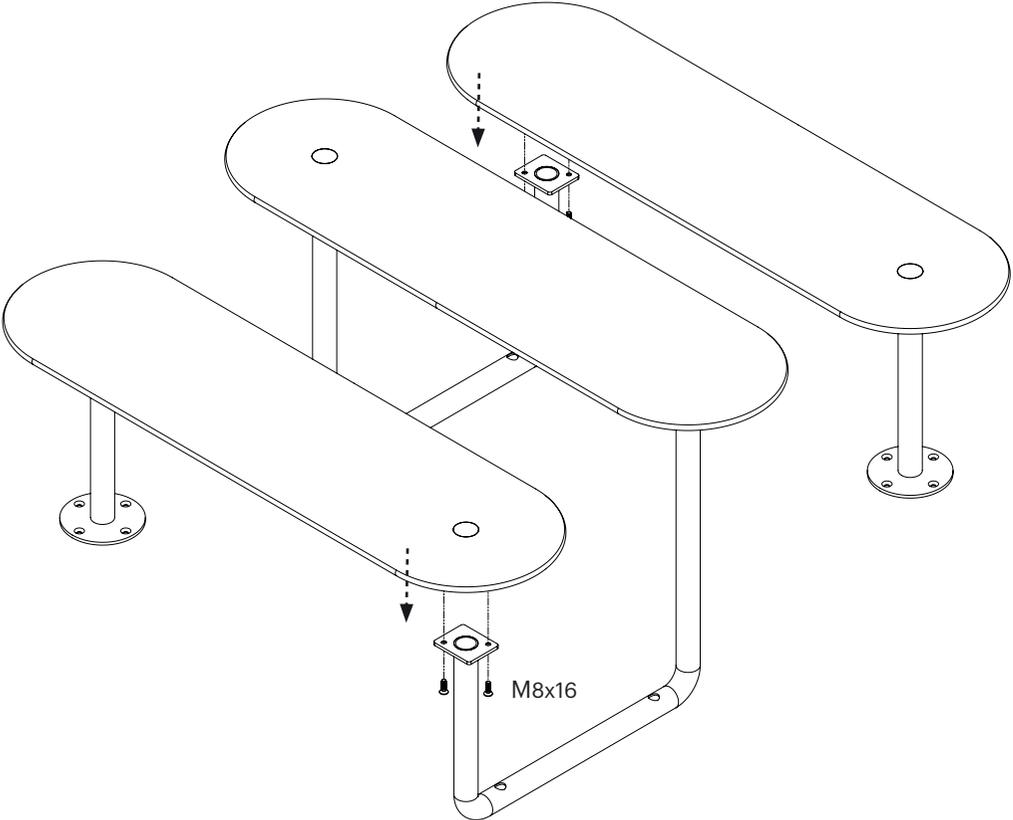

# MOUNTING OF POINT SUN

Place the Point Sun light unit in the base, align the holes and tighten the safety set screw. Then place the whole unit in the hole and use the M8x90 bolt to fix it to the metal frame underneath. Use the M8x30 to fixate it from the side, do not overtighten.

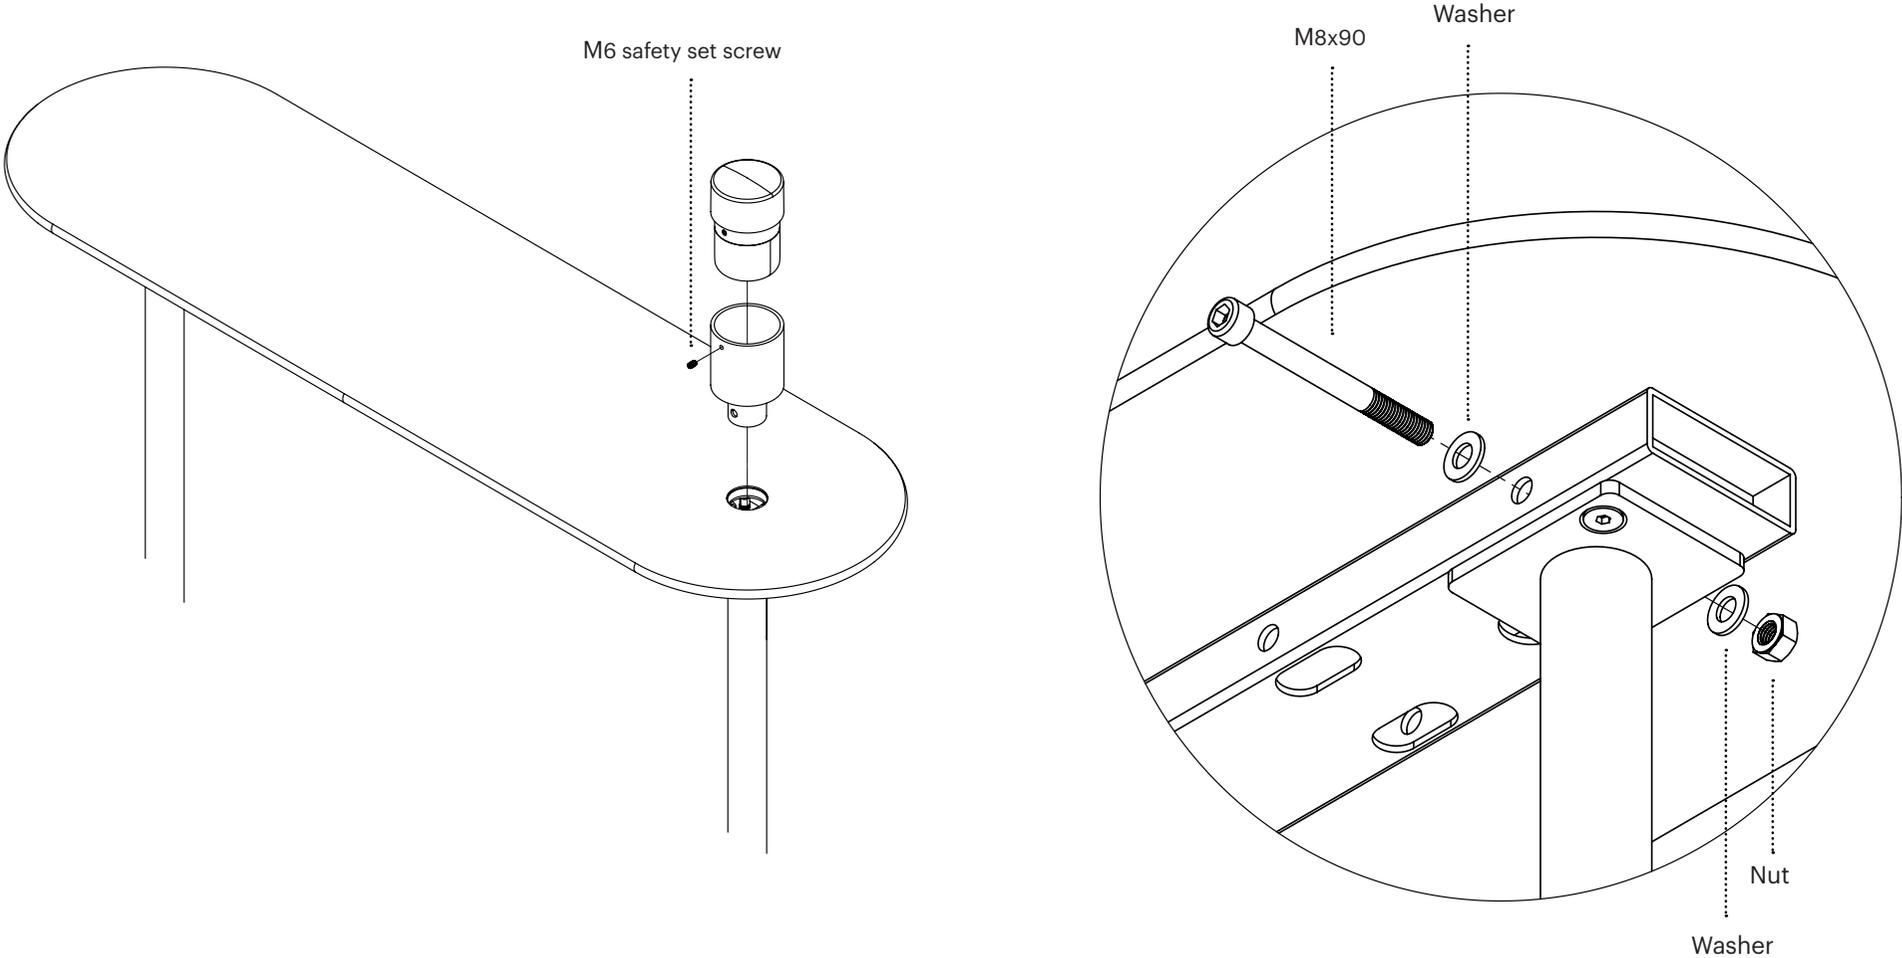

## CLEANING

Clean the laminate surface with warm water and a soft sponge.  
NEVER use the abrasive "green" side of the sponge. Use an ordinary universal cleaner.

Difficult dirt must be removed with a nano sponge and water. Please take a closer look at our website, or contact us for information.



---

Kigkurren 8A  
Islands Brygge  
DK-2300 Copenhagen

**out-sider.dk**  
**+45 77 343 341**